


Post Mounting Hardware Not Included

Tools Needed:
-Phillips Head
Screwdriver

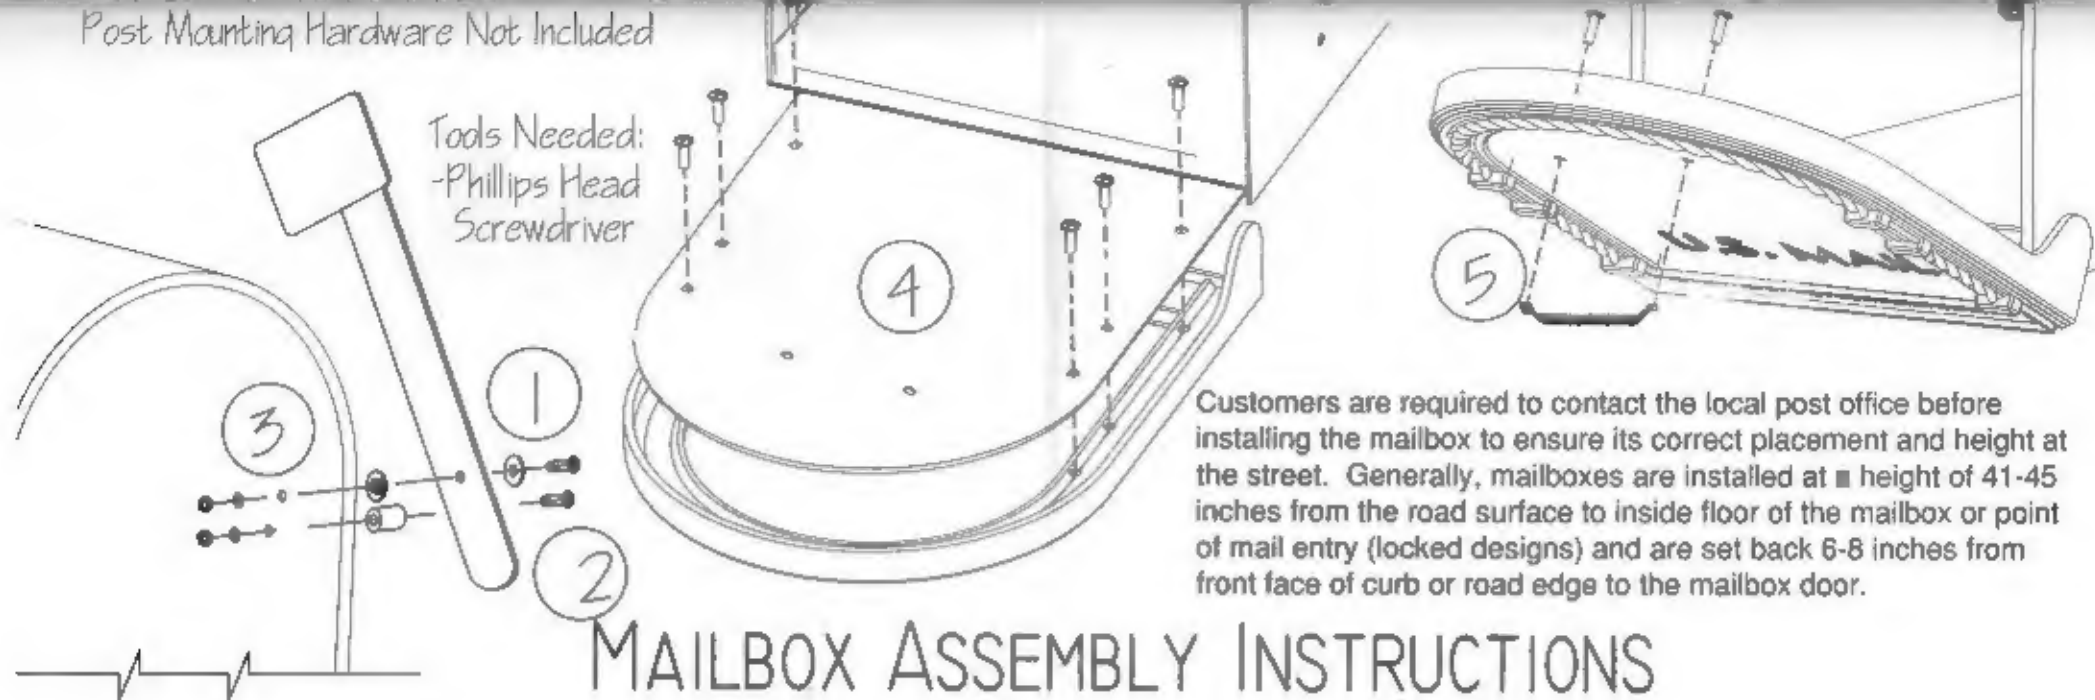

Customers are required to contact the local post office before installing the mailbox to ensure its correct placement and height at the street. Generally, mailboxes are installed at a height of 41-45 inches from the road surface to inside floor of the mailbox or point of mail entry (locked designs) and are set back 6-8 inches from front face of curb or road edge to the mailbox door.

MAILBOX ASSEMBLY INSTRUCTIONS

For Mailbox Model #WM16

-Flag Assembly

- 1) Assemble the 18mm machine screw, flat washer, flag, flat washer, to mailbox, lockwasher, nylock nut as shown. Tighten loosely.
- 2) Assemble the 18mm machine screw, flat washer, flag, spacer, to mailbox, lockwasher, nylock nut as shown and tighten.
- 3) Snug flag screw and nut for operating fit

-Frame and Handle Assembly

- 4) Choose frame, assemble the door frame to mailbox door with M5 x 10mm screws.
- 5) Assemble the handle to the mailbox door with M4 x 6mm screws.

Care and Maintenance

The mailbox body is protected by a rust resistant powder coat paint. With a minimum amount of maintenance, your mailbox can look like new for a long period of time. Like any outdoor product made of steel, surface rust may appear over time depending on its placement or environmental conditions. Wipe any surface rust with a steel wool pad and clean with a damp cloth and household detergent occasionally. Coat your mailbox with a high quality car wax and your box will retain its finish. If necessary, touch up paint may be required to maintain the mailbox and extend its useful life.


GIBRALTAR
INDUSTRIES
TAYLORSVILLE, MS
39168